

By Default, ANANLOG SWITCH (IC2) is pulled hi, Allowing normal resetting operation.

To disable resetting PULL the ENABLE line DOWN (J2-PIN5)

