



J5 is actually 3 rows - 6 columns to accommodate servo connectors

### Servo Input