
## Exploded view, with steps

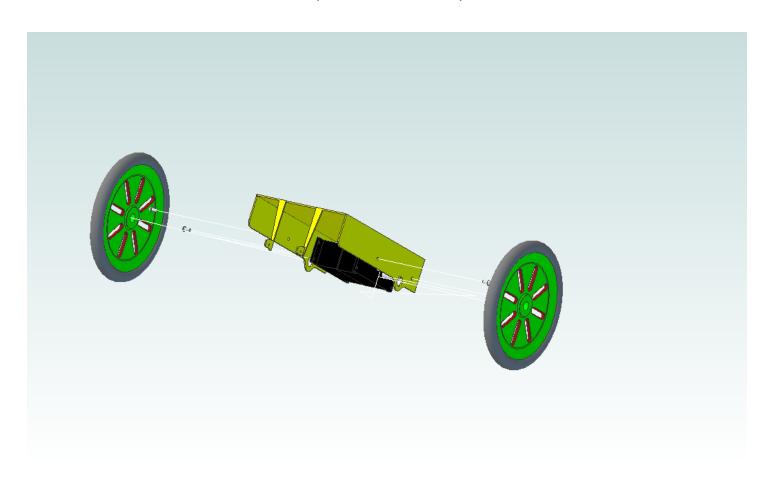

Explode Implode Reset

Wheel 1: Place the wheel

Wheel 2: Do the same with the second wheel

Bolt1: Let's fix the servo..

Bolt2 : Keep on...

Bolt3: and on...

Bolt4: And on...

Servo 2: Insert 2nd servo

Servo1 : Put servo 1