

AEROCOMM AC4790-200M

PIN 10 - VCC
PIN 11 - VCC
PIN 17 - CMD/DATA
PIN 2 - TXD
PIN 3 - RXD
PIN 7 - CTS

PIN 15 - RESET

PIN 5 - GND
PIN 16 - GND

+3V3

BY DEFAULT - CMD/DATA LINE KEPT LOW (COMMAND MODE)

10K
R1

VSS

VSS

PROPELLER

PIN 24 - CMD/DATA
PIN 31 - RX
PIN 30 - TX
PIN 25 - CTS

PIN?? RESET AC4790

PIN -RESET PROP

PROP PLUG - USB2SER

DTR
RX
TX
GND

VSS

PROP-AC4790-200M REV 2	
REV: 2	IMIX MULTIMEDIA - SYDNEY
not saved!	Sheet: 1/1