



Continue for more that 8 Outputs (i.e up to 32)

I/O Pin = OUTPUT, Set High to Fire Ignitor  
 I/O Pin = INPUT, Read HIGH to detect CONTINUITY of ignitor  
 ALL I/O Pins must be set to OUTPUT in ARM Mode  
 ALL I/O Pins must be set to INPUT in TEST Mode