

Quick-Start Guide

Winterm™ 9650XE XPe-Based Thin Client


See accompanying documents in the shipping carton for License Agreement and Warranty information.

Important: A printed copy of the Wyse Technology End User License Agreement is included in the shipping box and provided for your reference only. The license at <http://www.wyse.com/license> as of the purchase date is the controlling licensing agreement. By copying, using, or installing the software or the product, you agree to be bound by those terms.

Caution: Improper connection, mounting, or use of this product could result in component failure and/or flash memory corruption. Read Caution Statements before setting up and operating the thin client.

Components

- 1 Choice of optional drives:
 - CD-ROM drive (optional)
 - DVD drive (optional)
- 2 Lock receptacle
- 3 Speaker out
- 4 +12V Power input
- 5 PS/2-type keyboard port
- 6 PS/2-type mouse port
- 7 Parallel port
- 8 PCI expansion card slot
- 9 USB port (2)
- 10 Network port, 10/100Base-T
- 11 Serial port
- 12 Microphone in

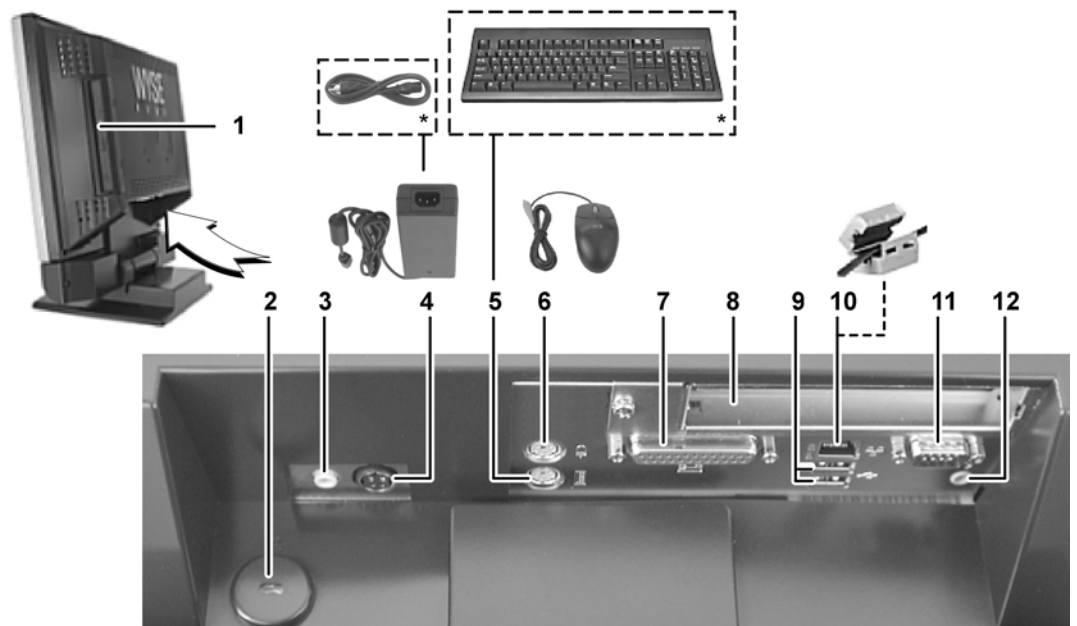

Caution Statements:

Setup

- Do not connect to AC power until all other connections are made, including the power adapter. Connecting or disconnecting components or equipment on the back panel when the thin client is receiving AC power can cause power surges and damage the device.
- Do not force a connector into its socket. If any undue resistance is encountered, ensure that the connector is correctly oriented to the receptacle.

Orientation and Venting

- Mount the thin client only as shown. Improper orientation could inhibit the dissipation of heat from the thin client and damage it.
- Allow sufficient space around the thin client for ventilation; do not place the device in any enclosure that restricts airflow around the device; do not place any objects on the device or block the vent holes under the device. Environmental operating specifications can be found in the thin client's datasheet located at <http://www.wyse.com/products/winterm>.


Power Sources

- To ensure regulatory compliance, use only the power supply included in the shipping box, or a Wyse-approved equivalent, with the thin client. Also, the noise suppressor (ferrite bead) included in the box with the thin client must be installed on the network cable as described following these caution statements. Refer to the regulatory notices in the thin client's on-line documentation at <http://www.wyse.com/products/winterm/reference/9series>.
- Accidental loss of power can damage the thin client. Avoid connecting it to any power outlet which can be accidentally switched off. Do not hard reset the thin client by holding down the power button during normal operation.


*Supplied for U.S.A.; in other locales, check package contents or contact your Wyse reseller.

- When turning off the thin client, be sure to perform a complete shutdown (via the user interface or a light press on the power button). Do not disconnect the AC power cord, DC power cord, or shut off power at a circuit breaker (including power strips), etc., to turn off the device.
- Surge protectors for electrical devices are recommended in areas of lightning. However, when lightning is occurring, your equipment should be properly shut down and unplugged from AC power until the storm has passed.
- Be very careful to not interrupt power while the thin client is downloading a software update.

Note: To ensure that the product complies with EN55022B and FCC Class B requirements, install the ferrite bead on your LAN cable as shown in the illustration.

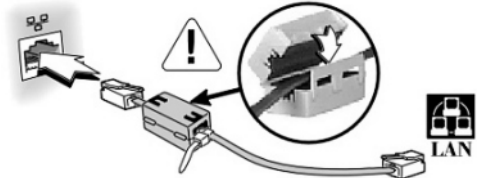

User Controls

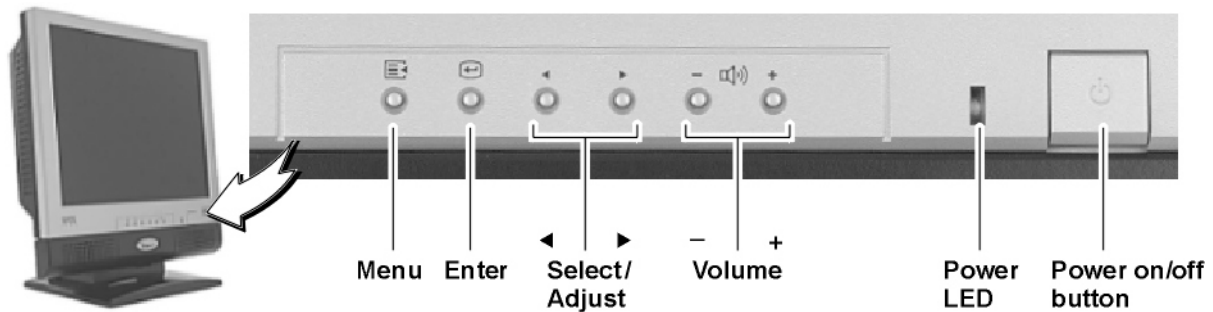

Control Button	Function
Menu	Opens the On-Screen Display (OSD) window or exits a function menu.
Enter	Selects a function or saves a setting change.
Select/Adjust (< or >)	Navigates within a display and adjusts control levels.
Volume (+ or -)	Adjusts audio volume.
Power	Turns the thin client power on or off. The Power LED is green when the thin client is on.

For more information about customizing the Model 9650XE, refer to the thin client's hardware guide at:

<http://www.wyse.com/products/winterm/reference/9series>

Configure – Setup is quick and simple...

The thin client is preset to auto-login as **User** (password: **User**). For administrative access, the thin client is preset to accept the user name **Administrator** (password: **Administrator**). VNC is also preset to start automatically (password: **Wyse**). User names are not case sensitive; passwords are case sensitive. To log in as administrator hold down the Shift key while logging out of the user account until you get to the login screen, then enter the user name and password for the administrator account.

Caution: It is strongly advised that the administrative password be changed immediately upon configuring the thin client for use.

Need more information?

Resources Available on Wyse Web Site - User and network administrator documentation is available at:

<http://www.wyse.com/products/winterm/reference/9series>

Wyse Service and Support Web Site - Upgrade software images for installation on your FTP file server are available at:

<http://www.wyse.com/serviceandsupport/support/askwyse.asp>

Wyse Rapport - Information about the remote management software that comes with your thin client is available at:

<http://www.wyse.com/bundle>

Wyse Warranty Registration - Wyse's warranty registration* process is available at:

<http://www.wyse.com/serviceandsupport/register.asp>

* Register within 90 days to get 2 years' extended warranty at no cost.



Wyse Technology Inc.
3471 North First Street
San Jose, CA 95134-1801 U.S.A.

883793-01 Rev. B
November 2005

©2005 Wyse Technology Inc. All rights reserved.
This product and/or associated software are protected by copyright, international treaties, and various patents, including the following U.S. patents: 6,836,885 and 5,918,039.