




Can not drive the coil too small resistance.

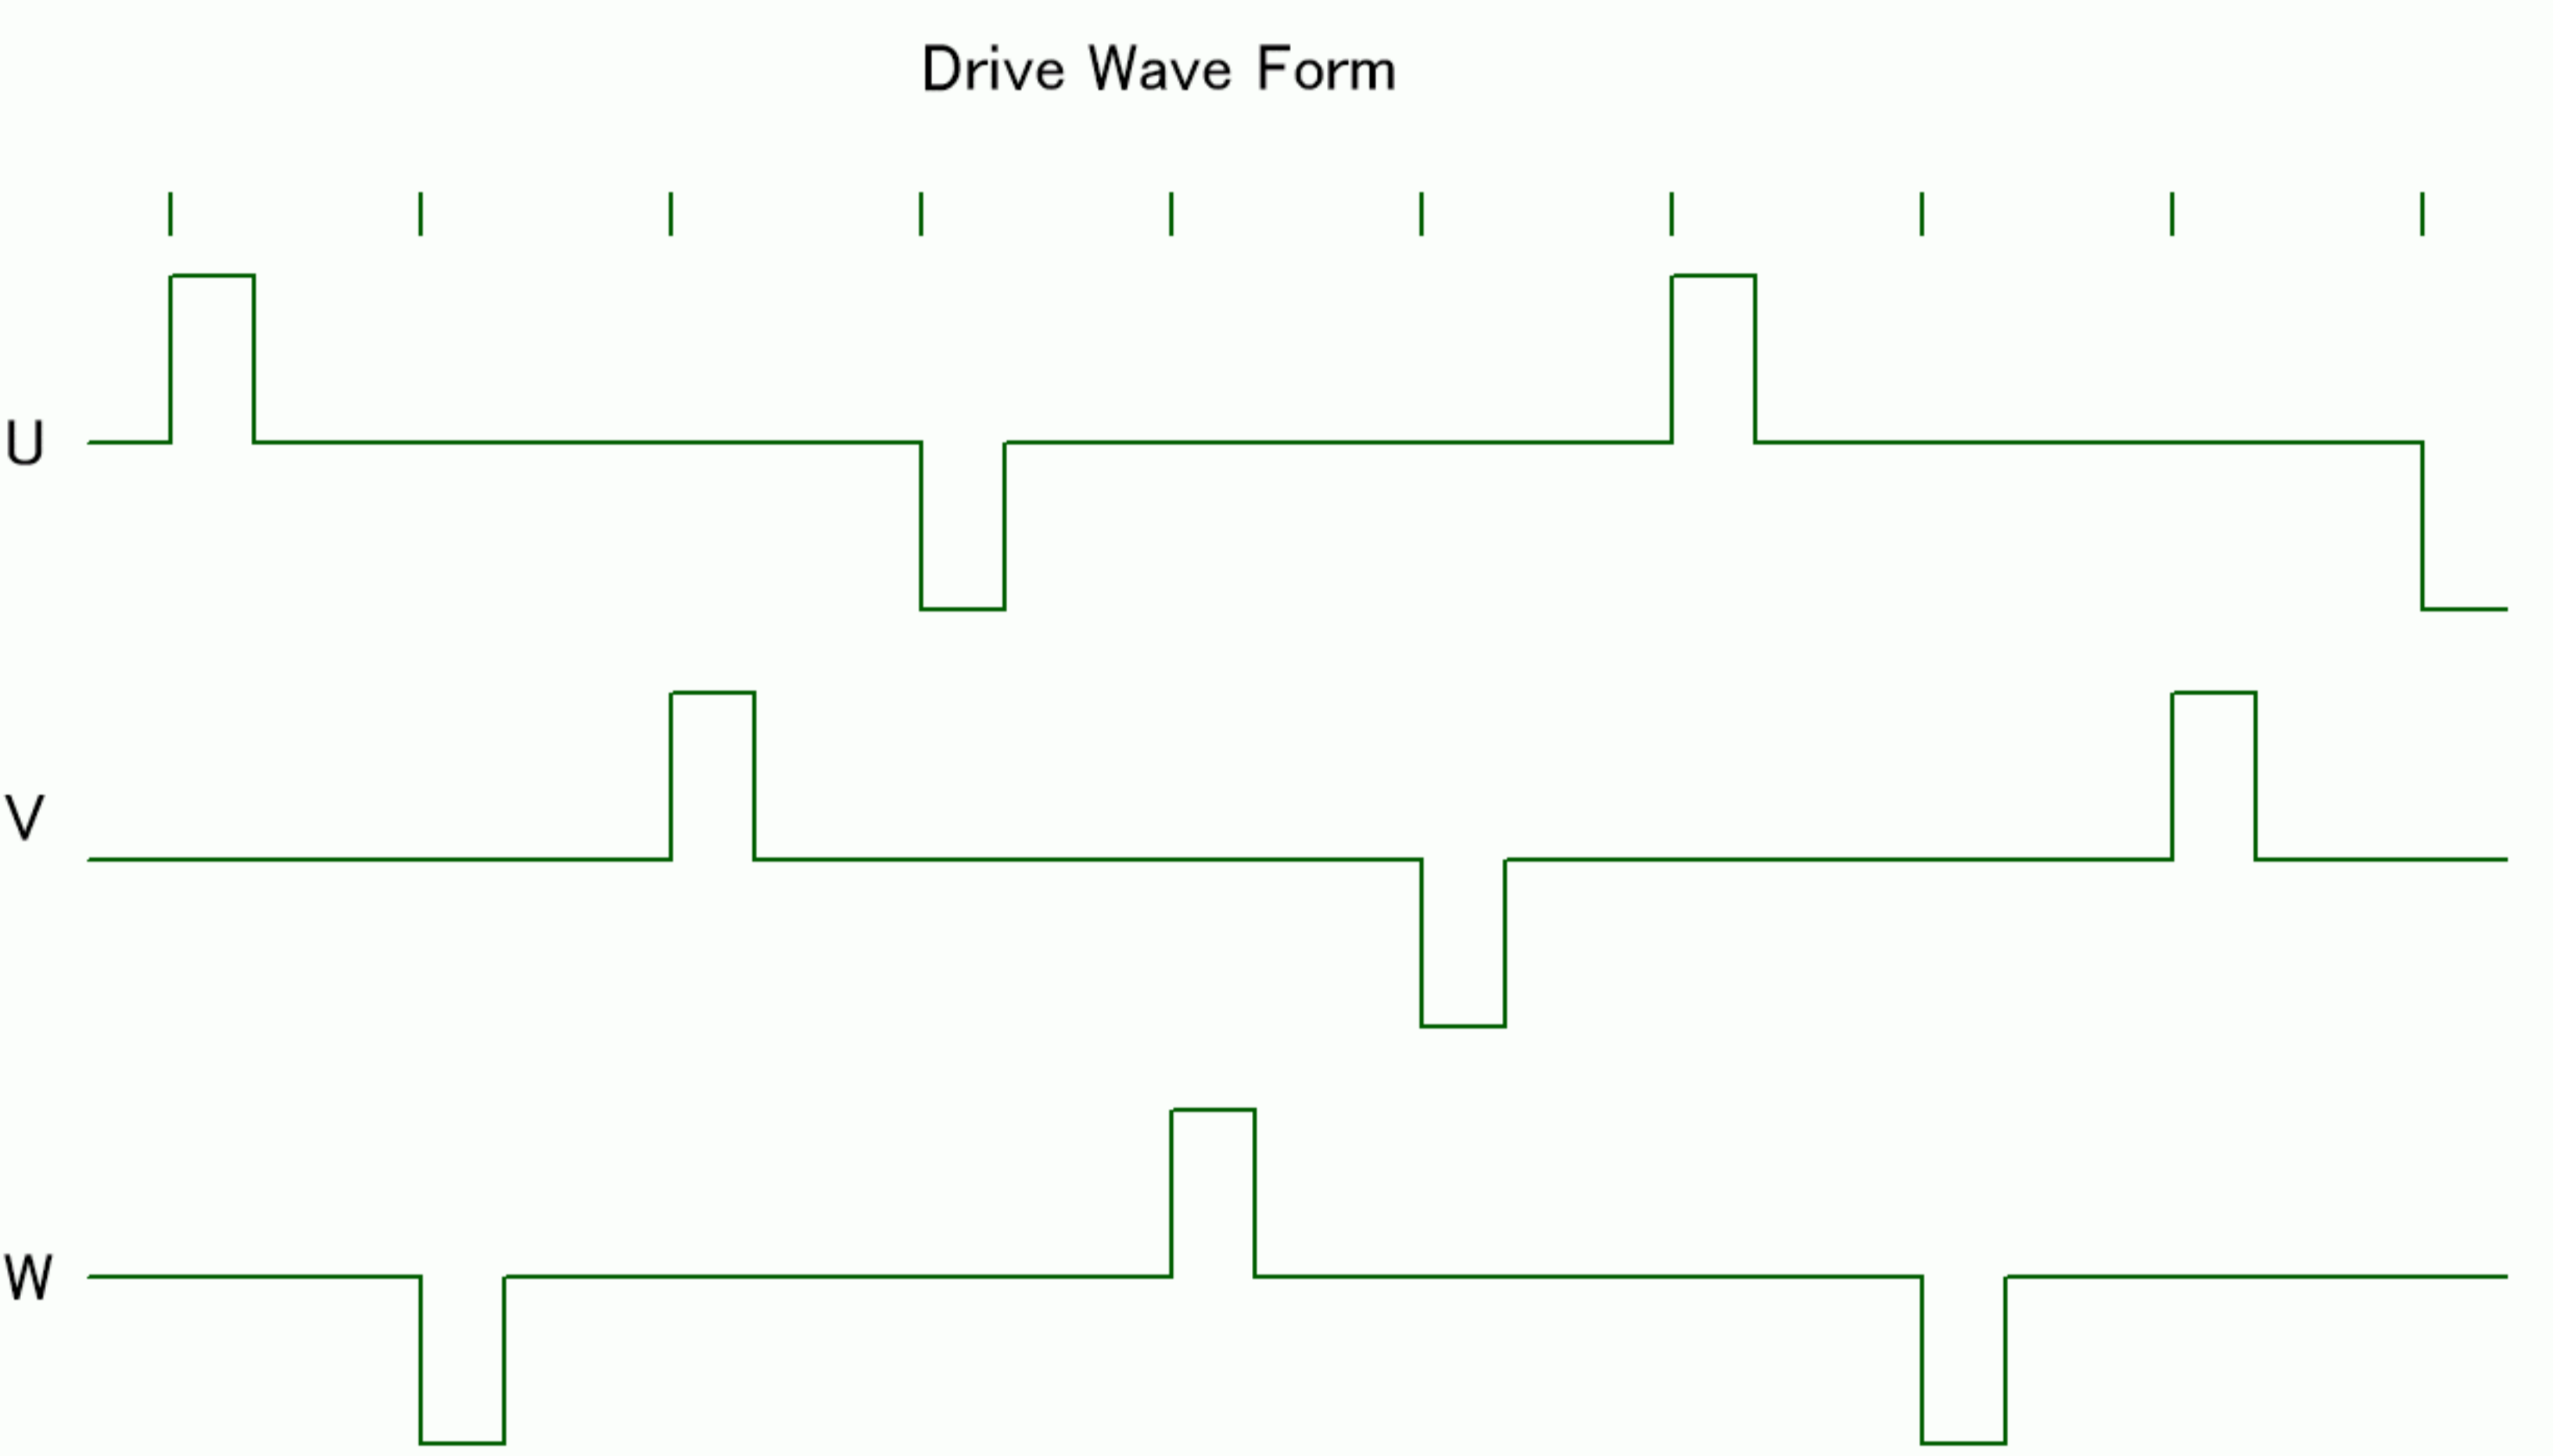

You can reduce the starting current. But, It only vibrate only. Never start.

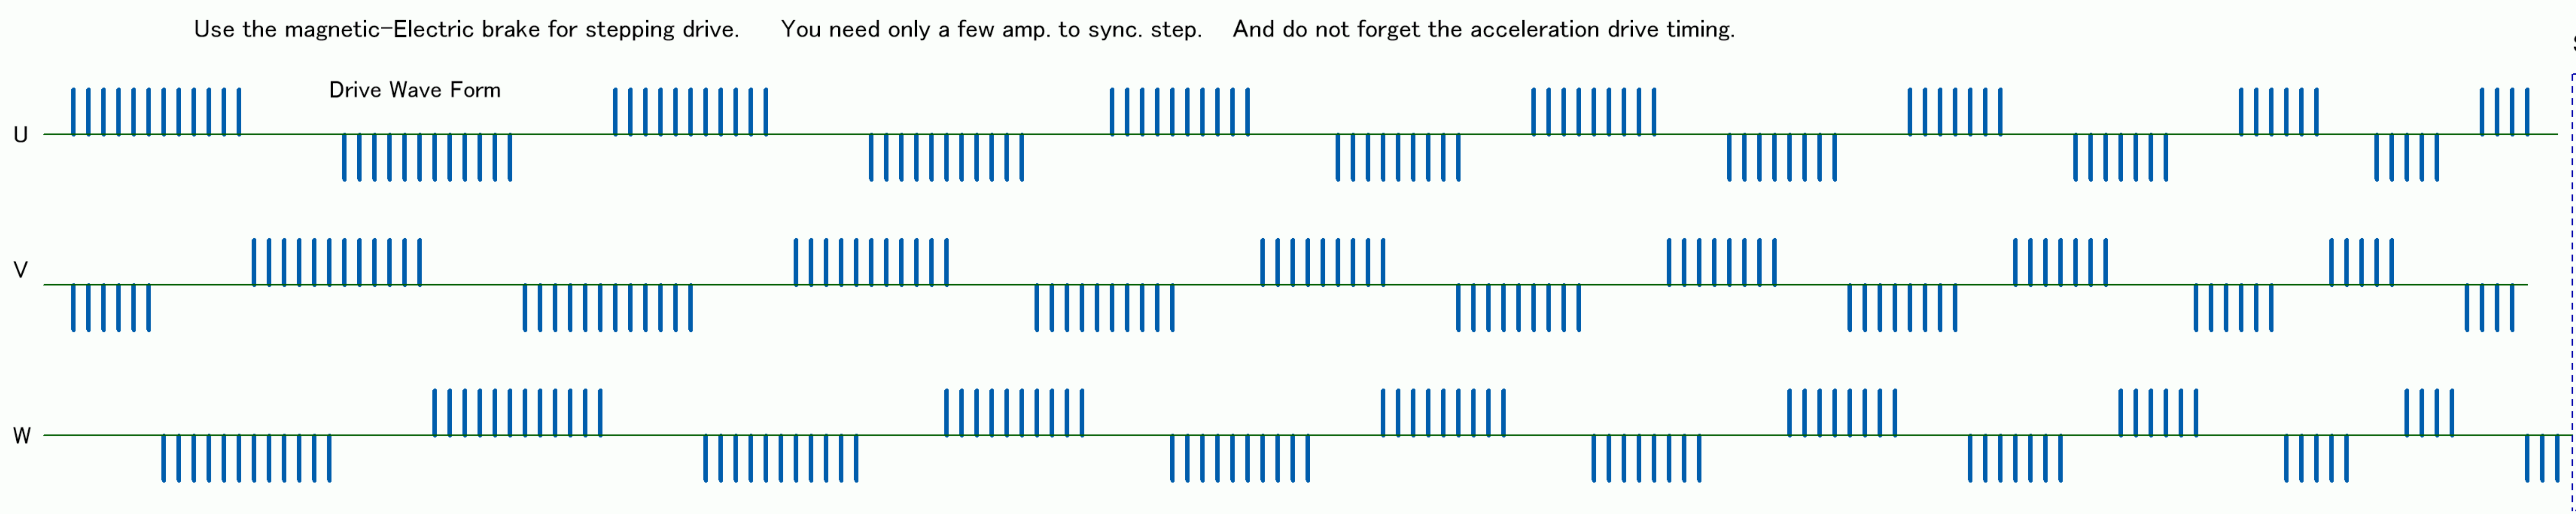

Use the magnetic-Electric brake for stepping drive. You need only a few amp. to sync. step. And do not forget the acceleration drive timing.

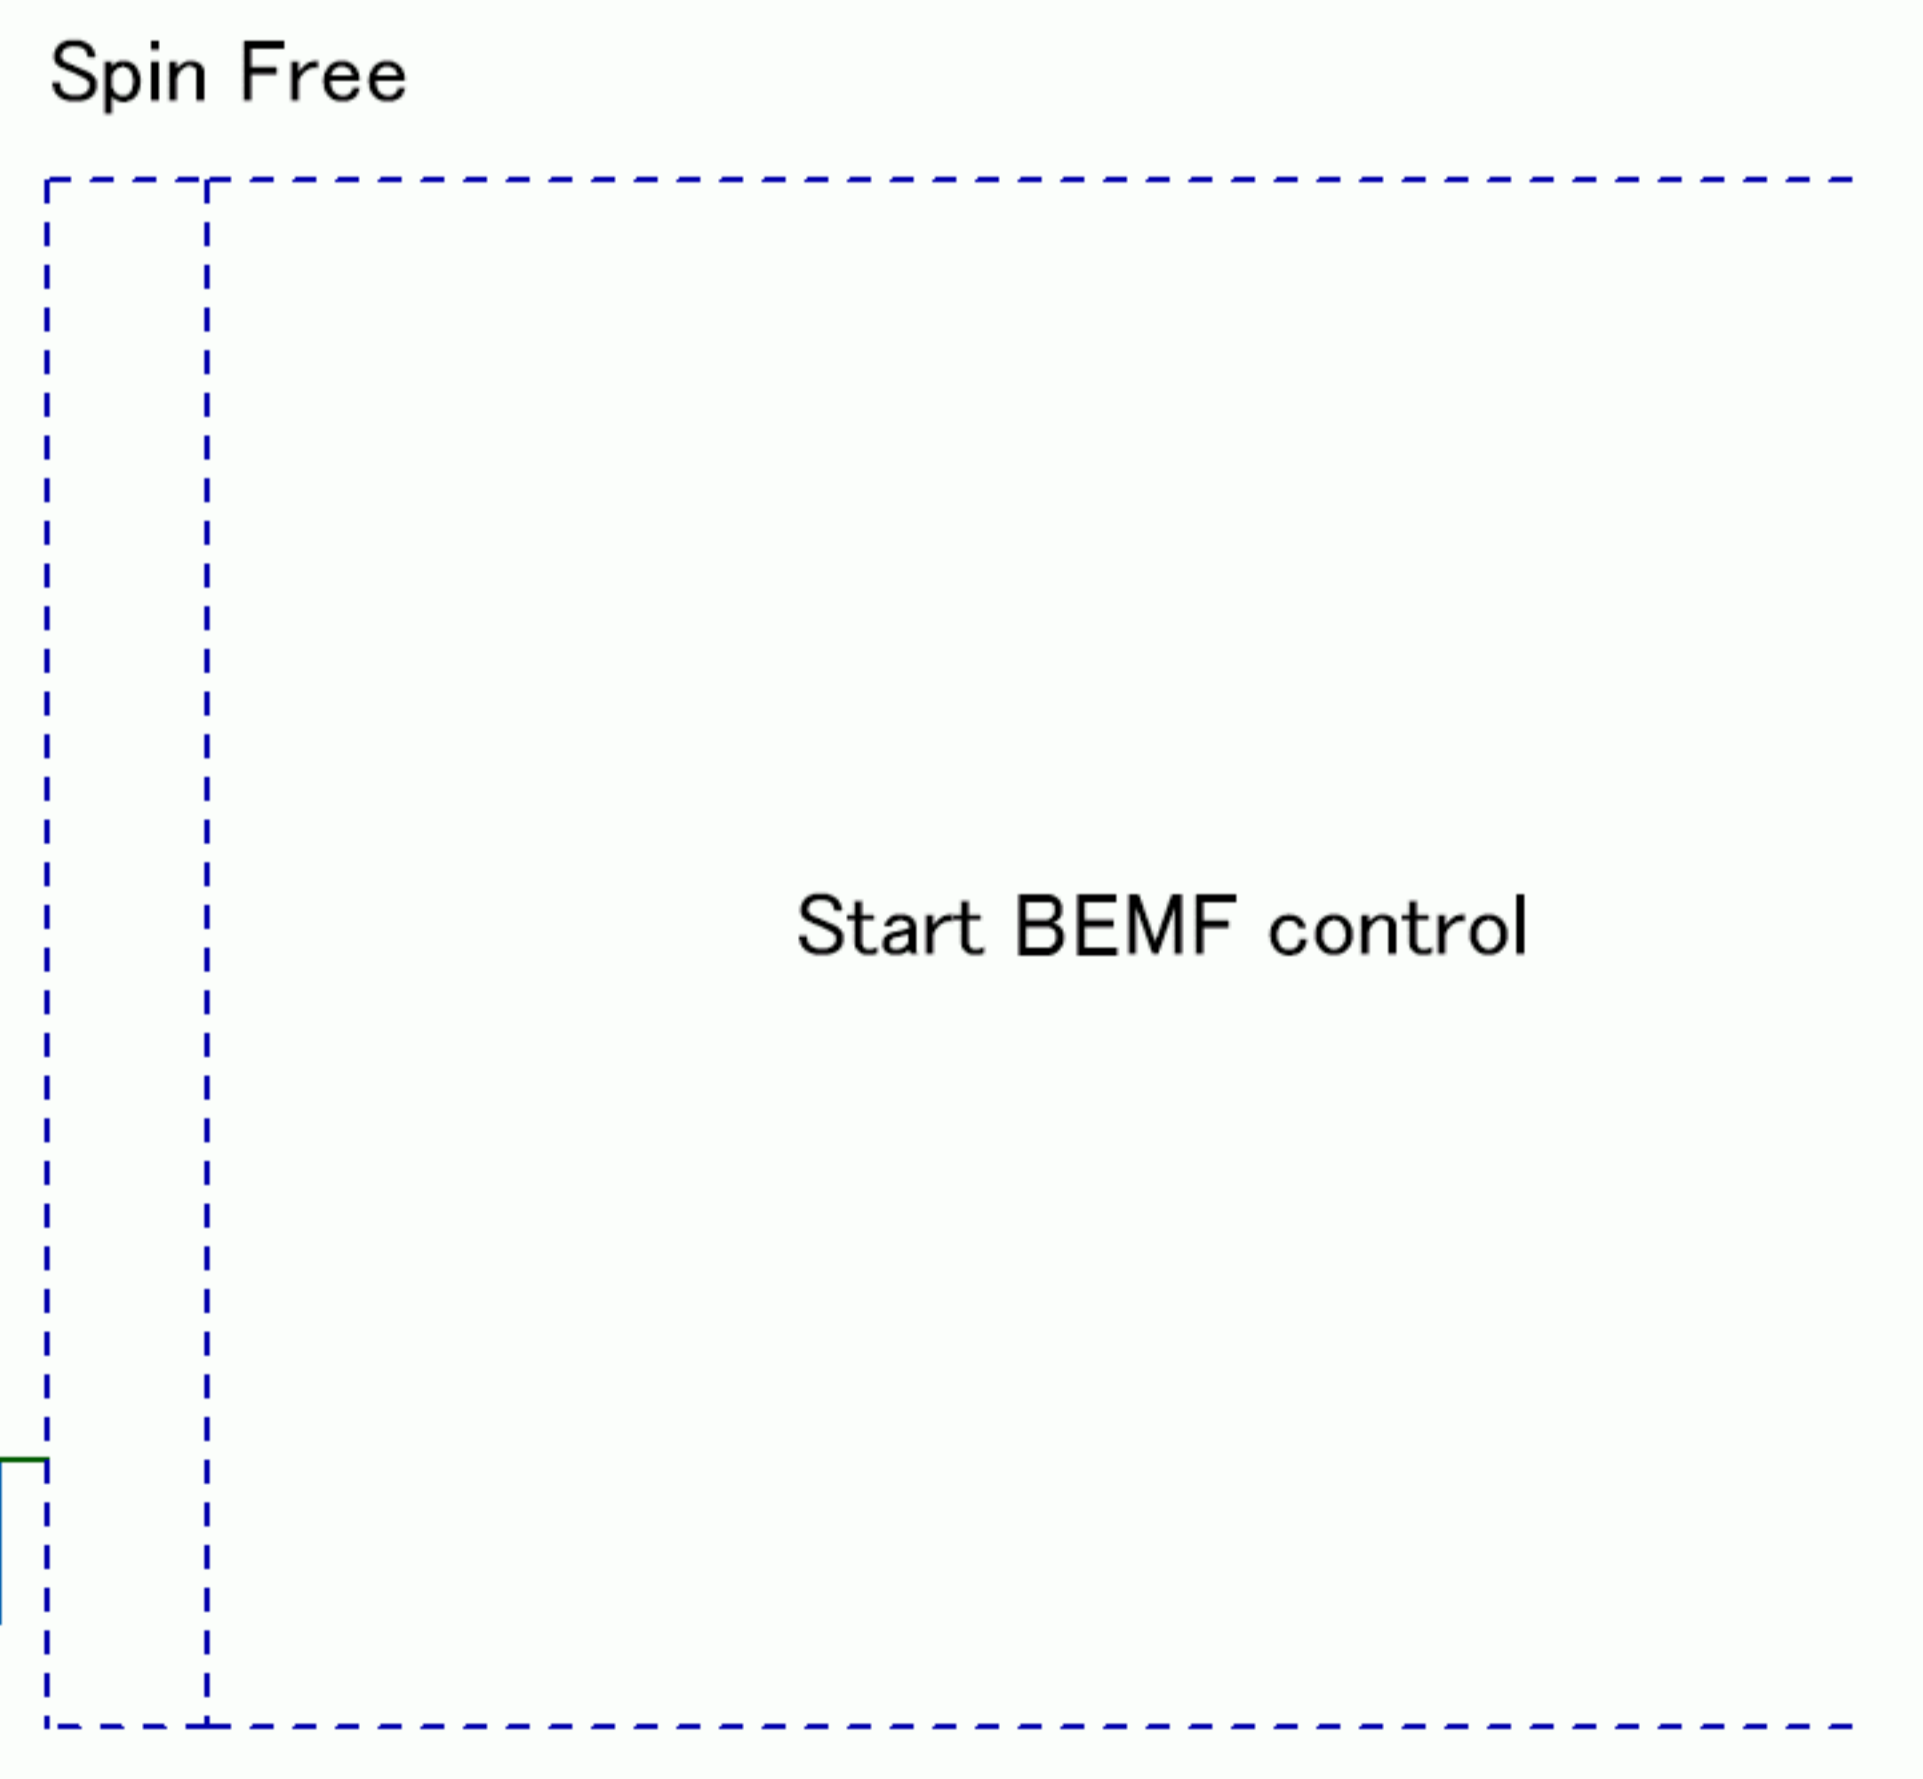

Date	Rev.	Designed by	Title	Page
'07/01/13	0.1	Takao Shimizu	Sensor-less Brush-less Motor starting control image	1/1