Propeller Eurocard Touchscreen 161
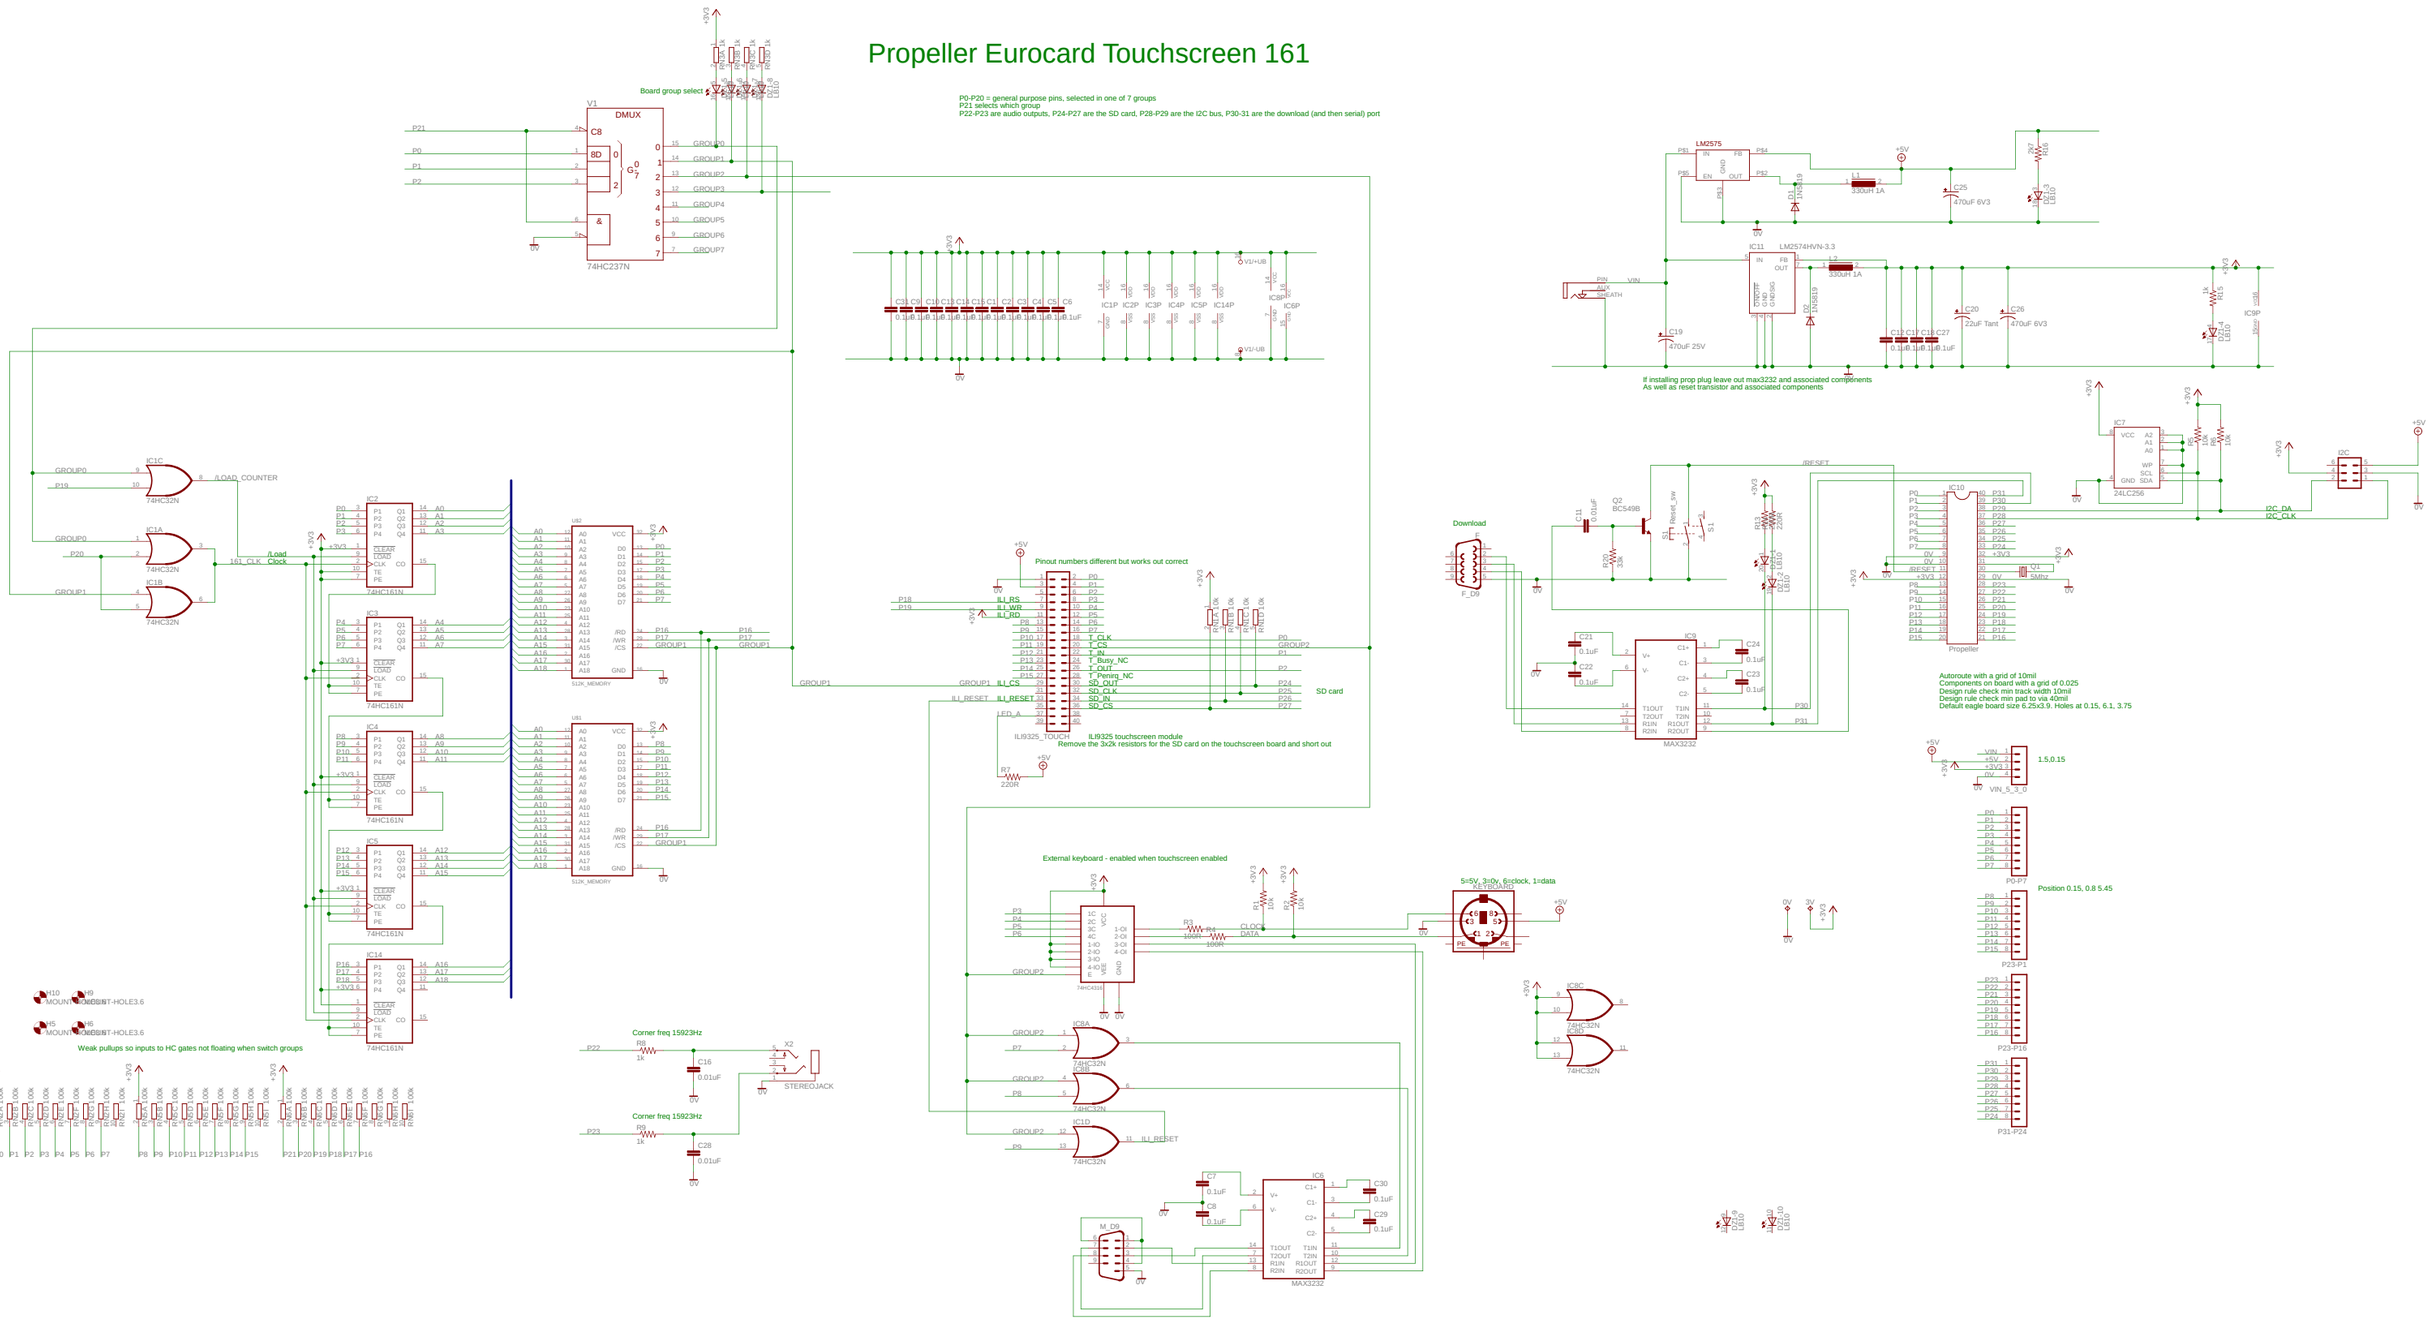
P0-P20 = general purpose pins, selected in one of 7 groups
P21 selects which group
P22-P23 are audio outputs, P24-P27 are the SD card, P28-P29 are the I2C bus, P30-31 are the download (and then serial) port