


Parallax “Propeller ProtoBoard and Proto Board USB”, 5V regulator oscillation Repair Procedure

STEP 1: Solder a 10uF tantalum capacitor in the indicated holes. Place the pin marked with a red line in hole marked ⊕ and the other pin in the hole marked ○

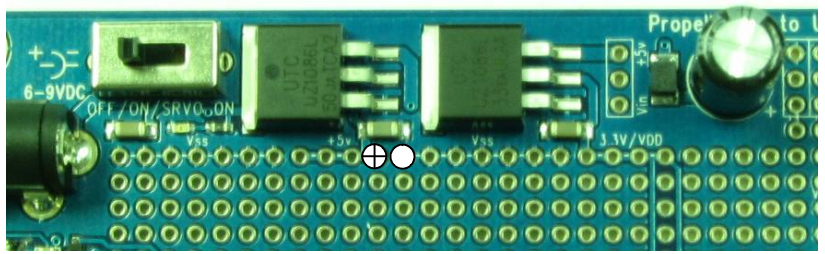

STEP 2: Finished board will look like this.

