PARALAX A

599 Menlo Drive, Suite 100 Rocklin, California 95765, USA **Office/Tech Support**: (916) 624-8333 **Fax:** (916) 624-8003 General E-mail: info@parallaxinc.com Technical E-mail: stamptech@parallaxinc.com Web Site: www.parallaxinc.com Educational Resources: www.stampsinclass.com

Contents	Page
Introduction	1.1
Applications	1.1
Parts	1.2
Circuit	1.2
Breaking the Beam and Testing the Circuit	1.3
Proximity Detection	1.5
Distance Detection	1.6
Reading Signals from a Universal IR Remote	1.8
Entering Multiple Numbers	1.13
Stamp to Stamp Communication	1.15
Extending the IR Range and Capabilities	1.18

### Introduction

This document is for use with the infrared (IR) LED and 40 kHz detector added to on-line orders above \$25 placed on <u>www.parallaxinc.com</u> from noon on April 26 through April 29, 2001. You can use the parts in this kit for object detection and line of sight communication. This document has six examples to get you started along with references to other Parallax documentation with more information (all available for free download).

### Applications

The infrared (IR) LED in this kit is similar to what you would find in any handheld remote for your TV, cable box, VCR, etc. The IR detector inside each of these appliances is also very similar to the detector in your kit. These two components can be used together to perform a variety of functions. Just a few examples are:

- **Object detection** determining when a person or object either reflects broadcasted IR or breaks an IR beam.
- **Proximity detection** broadcasting IR that when reflected indicates the presence of an object/person within a certain proximity. You can also use some techniques to get a distance measurement with high enough resolution for some personal robotics applications.
- **Communication** taking instructions from some handheld remotes and for communication between BASIC Stamps.


Weekend Application Kits  $_{\text{Rev1}}$  - Page 1.1 **ã** 2001 Parallax, Inc. - all rights reserved.

Parts

Quantity	Parallax Stock Code	Schematic Symbol, Part Drawing and Description		
1	350-00017	IR LED 2 2 Short Leg Short Leg		
1	350-00014	1 2 3 1 2 3 1 2 3 View from Top 40 kHz IR Detector		
1	150-02210	$1 \xrightarrow{220 \Omega} 2$		

### Circuit

Figure 1.1 shows how to connect the parts. In this example, we'll use BASIC Stamp I/O pin P7 to send signals out the IR LED and P8 to read the 40 kHz IR detector's output.

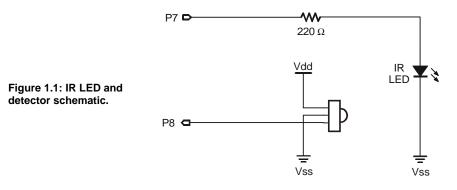

The IR detector is designed to send a low signal when it sees IR flashing on and off at about 40 kHz with a 50% duty cycle, meaning that the on/of times are equal.


Although the FREQOUT command only goes up to 32,768 Hz, if you leave off any filtering, you can use arguments above 32,768 to specify the frequency of a harmonic signal. In other words, when you use a command like FREQOUT 7,1,37500 without the RC filter shown in the *BASIC Stamp Manual*, a harmonic signal is broadcast at roughly 37500. The 40 kHz detectors do a good job picking up this signal. The unfiltered FREQOUT signal also causes the IR detector's output to rebound more slowly than when it sees 40 kHz at 50% duty. The result is that you can send the FREQOUT signal out 1 I/O pin, stop sending the signal, and still have enough time to check the detector's (slowly rebounding) output.

For more information on how the "FREQOUT trick" works, take a look at the beginning of Chapter 5 in the Parallax *Robotics! v1.4 Student Workbook*. It's available for free download from the <u>www.stampsinclass.com</u>  $\rightarrow$  Downloads  $\rightarrow$  Educational Curriculum page. This chapter also discusses the IR wavelengths these components use in case you want to try to find substitute parts locally.

### Breaking the Beam and Testing the Circuit

The round bump on the face of the IR detector is a lens it uses to collect light. In the absence of IR flashing on and off at around 40 kHz, the IR detector sends a 5 V high signal. When IR flashing on and off at around 40 kHz enters this lens, the circuitry inside the IR detector sets its output to 0 V (active-low).

By pointing the IR LED's output at the IR detector's input (see Figure 1.2), we can test to make sure the system is working by writing a program that tells you if there is an obstacle, such as a piece of paper or your hand between the IR LED and the detector. If there is nothing to break the beam, the IR detector sends a low signal. If there is something breaking the beam, the IR detector does not see the modulated IR and sends a high signal.

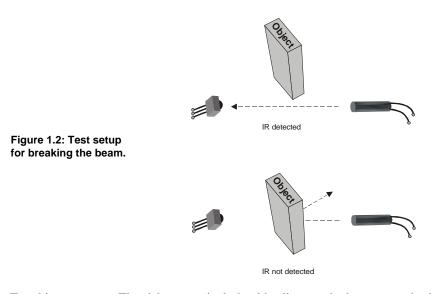

Try this program. The debug terminal should tell you whether or not the beam is broken. If it tells you the beam is broken regardless of whether or not there is something blocking the IR, it means you have a problem with either your wiring or setup. Double check Figure 1.1 and 1.2, and try again.

```
' Program Listing 1.1 - Testing the IR Beam.bs2
IR_detect var bit
low 7
loop:
    pause 50
    freqout 7, 1, 38500
    IR_detect = in8
    if IR_detect = 0 then unbroken
    ' Make sure to add six spaces to the debug statement
    ' below. That way both debug statements will have the
    ' same number of spaces for a better display.
    debug home, "Beam is broken; object detected. "
    goto loop
    unbroken:
```


PARALLAX ⅔ - Page 1.4

debug home, "Beam is unbroken; object not detected." goto loop

This code uses the FREQOUT command to broadcast a harmonic at about 37.5 kHz, which turns out to be the best harmonic frequency for detection using the "FREQOUT trick".

### **Proximity Detection**

You can also point the IR-LED away from the detector (see Figure 1.3). When an object is close enough (and not dark black, which absorbs IR quite well), it reflects the IR signal back to the detector.

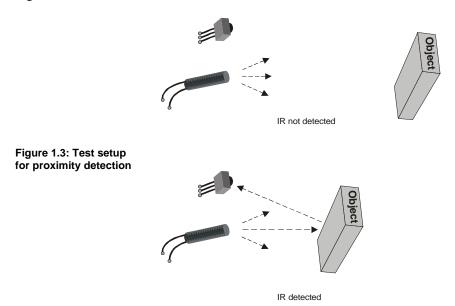

Program listing 1.2 is almost the same as Program Listing 1.1. The only difference is that Program Listing 1.2 considers the presence of IR as indicating the presence of an object, while Program Listing 1.1 sees it in reverse.

```
' Program Listing 1.2 - Proximity Detection.bs2
IR_detect var bit
low 7
loop:
```

```
PARALIAX ⅔ - Page 1.5
```


```
pause 50
freqout 7, 1, 38500
IR_detect = in8
if IR_detect = 0 then not_detected
  debug home, "Output is high, no object detected."
  goto loop
not_detected:
  ' This time, add a space to the end of this debug
  ' command. This will keep both strings the same
  ' length and make the display better.
  debug home, "Output is low, object is detected. "
  goto loop
```

### **Distance Detection**

Program listing 1.3 uses a frequency argument of 37500 for maximum sensitivity. Then it progressively detunes the detector by using frequencies that make the detector less sensitive using these frequency arguments:

37500,38250,39500,40500,41500

Figure 1.4 shows how this detuning can be used to give you a rough idea of an object's distance from the detector.

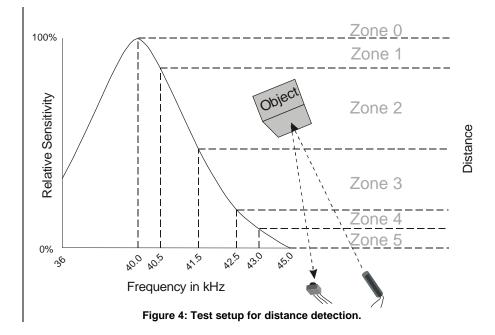

The key idea here is that as the object gets closer, the reflected IR is brighter. In other words, the signal is stronger. To cause the IR detector's 40 kHz filter not to see the object, the frequency that's broadcast has to be further from the filter's center frequency. It's pretty easy to write a PBASIC program that tests at each frequency and tracks when the object was no longer detected.

Run Program Listing 1.3 and try placing your hand, or a piece of paper at various distances from the detector. You should be able to detect at least zones 0 through 4; zone 5 may or may not show up.

' Program Listing 1.3 - Distance Detection.bs2 counter var nib IR\_outputs var byte IR\_freq var word output 7 main:

PARALLAX ⅔ - Page 1.7

```
IR_outputs = 0
' Load sensor outputs into l_IR_outputs and r_IR_outputs
' using a for...next loop,and a lookup table, and bit
' addressing.
for counter = 0 to 4
    lookup counter,[37500,38250,39500,40500,41500], IR_freq
    freqout 7,1, IR_freq
    IR_outputs.lowbit(counter) = ~in8
    next
' Display l_IR_outputs and r_IR_outputs in binary and ncd
' format.
    debug home, "Readings from IR detector", cr
    debug "Binary IR_outputs: ", bin5 IR_outputs, cr
    debug "Dbject is in zone: ",dec5 ncd(IR_outputs)
goto main
```

### **Reading Signals from a Universal IR Remote**

You can configure most universal remotes to use SONY<sup>®</sup> Corporation's IR communication protocol to send messages to the BASIC Stamp. To try this you'll need to dig up the documentation for one of your universal remotes or buy one. They are available for around \$10 at most electronics retail outlets (such as Radio Shack<sup>®</sup>) and also at general purpose retailers (such as K-Mart<sup>®</sup>).

Once you've got the documentation for your universal remote, check the instructions for how to configure it for a particular TV. There's usually a programming button that you have to press and hold until an LED on the remote blinks a couple of times. Then, you enter the a code from a list of manufacturers (also in the universal remote's documentation), and the LED will blink twice again indicating that the code was accepted. Follow the instructions in the universal remote's documentation to make the universal remote send signals to a SONY<sup>®</sup> television.

Try Program Listing 1.4 to see if the BASIC Stamp is receiving the expected messages. While running Program Listing 1.4, Press and hold the 5 key on the remote. Check and make sure your display is similar to Figure 1.5, which shows what the debug terminal should display. The pulse duration values might slightly different

from yours, but the decimal and binary numbers at the bottom of the display should match exactly.

	🤣 Debug Terminal #1 🛛 📃 🖾
	Com Port Baud Rate: Parity:
	Data Bits: Flow Control: • TX F DTR F RTS 8 01 • RX • DSR • CTS
	IR Messages Pulsed
	Start = 02488 us Start Bit 00 = 00696 us Binary-0
Figure 5: Debug terminal	01 = 00646 us Binary-0 02 = 01272 us Binary-1
when you press and hold the 5 key while running Program	03 = 00724 us Binary-0 04 = 00684 us Binary-0
Listing 1.4.	05 = 00668 us Binary-0 06 = 00678 us Binary-0
	07 = 01272 us Binary-1 08 = 00678 us Binary-0
	09 = 00676 us Binary-0 10 = 00678 us Binary-0
	Binary Value: 10000100
	Decimal Value: 132 Without bit-7: 004
	Deplure Macro Keys. Pause Close

'					
' Program Listing 1.4 - Display IR Remote.bs2					
·					
declarations:					
IR_det_pin	con	8			
pause_time	con	20			
active_low	con	0			
IR_detect	var	in8			
IR_pulse	var	word(12)			
counter	var	nib			
type	var	nib			
pulse_delay_time	con	2			

PARALLAX ⅔ - Page 1.9

```
debounce_time
                        20
                   con
                        byte
IR_message
                   var
active_high
                         1
                   con
·_____
initialize:
                                   ' Boot Routine
 debug cls
·_____
                                    ' Main Routine
main:
  if IR_detect = 1 then main:
  gosub display_heading
  gosub find_and_display_start_pulse
  gosub process_IR_pulses
  gosub display_IR_pulse_values
  gosub convert_to_binary_number_display
goto main
display_heading:
                                   ' Subroutine
 debug home
 debug "IR Messages Pulsed ", cr, cr
 debug "Pulse Duration Value", cr
 debug "-----", cr
return
-----
                                        _____
find_and_display_start_pulse:
                                     ' Subroutine
 for counter = 0 to 15
  pulsin IR_det_pin,active_low,IR_pulse(0)
   if IR_pulse(0) > 900 then display_start_bit
 next
 goto exit_find_and_display_start
 display_start_bit:
   debug "Start"
  debug " = ", dec5 IR_pulse(0) * 2, " us "
debug " Start Bit", cr
```

```
PARALLAX ∄ - Page 1.10
```


```
exit_find_and_display_start:
return
·-----
process_IR_pulses:
                                         ' Subroutine
 check_for_stop_bit:
    pulsin IR_det_pin,active_high,IR_pulse(0)
    if IR_pulse(0) > 1400 and IR_pulse(0) <> 0 then continue
    goto check_for_stop_bit
    continue:
    pulsin IR_det_pin,active_low,IR_pulse(0)
    pulsin IR_det_pin,active_low,IR_pulse(1)
    pulsin IR_det_pin,active_low,IR_pulse(2)
    pulsin IR_det_pin,active_low,IR_pulse(3)
    pulsin IR_det_pin,active_low,IR_pulse(4)
    pulsin IR_det_pin,active_low,IR_pulse(5)
    pulsin IR_det_pin,active_low,IR_pulse(6)
    pulsin IR_det_pin,active_low,IR_pulse(7)
    pulsin IR_det_pin,active_low,IR_pulse(8)
    pulsin IR_det_pin,active_low,IR_pulse(9)
    pulsin IR_det_pin,active_low,IR_pulse(10)
    pulsin IR_det_pin,active_low,IR_pulse(11)
return
display_IR_pulse_values:
                                        ' Subroutine
 for counter = 0 to 10
   debug " ", dec2 counter
   debug " = ", dec5 IR_pulse(counter) * 2, " us "
   branch IR_pulse(counter)>>9,[zero,one]
     zero: debug " Binary-0", cr: goto loop_again
           debug " Binary-1", cr: goto loop_again
     one:
   loop_again:
 next
```

PARALI AX ⅔ - Page 1.11

return

```
convert_to_binary_number_display: ' Subroutine
for counter = 0 to 10
    lookdown IR_pulse(counter), < [400,800],
IR_message.lowbit(counter)
    next
    debug cr,cr,"Binary Value: ", bin8 IR_message, cr
    debug "Decimal Value: ", dec3 IR_message, cr
    debug "Without bit-7: "
    debug " ",dec3 IR_message & %01111111,cr
return</pre>
```

The IR detector's output when pressing the 5-key looks about like this on an oscilloscope.

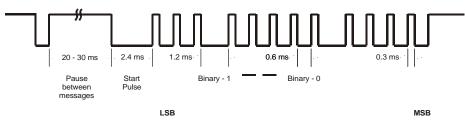



Regardless of which key is pressed, the message repeats itself every 20 to 30 ms. The start pulse lasts 2.4 ms, which is followed by binary pulses. A binary-1 lasts 1.2 ms, a binary-0 lasts 0.6 ms, and the time between pulses is usually somewhere between 0.25 and 0.8 ms depending on the brand and vintage of the remote.

The BASIC Stamp 2p is fast enough to decide what value it received between pulses, so the programming is considerably more concise (similar to Program Listing 1.7). To keep it general, this program is set up for the BASIC Stamp 2.

To determine if an IR signal is being transmitted, an if...then statement just before the main: routine checks over and over again to see if the IR detector's output is active-low. If yes, then it executes the rest of the program, else, it just keeps checking. When an IR broadcast is detected, Program Listing 1.4 next searches for the start pulse and displays it. Then, the data bits are captured and displayed. The process\_IR\_pulses subroutine looks for the lengthy pause between data pulses (a positive pulse). If you think about that high time between the last data pulse in the previous message and the start pulse in the current message as a long positive pulse, you'll see the reasoning for the PULSIN and IF...THEN reasoning at work for finding the first data pulse. It will either return a number larger than 2.8 ms or a data overrun value of 0. As soon as this happens, you're in the middle of the start pulse.

Since this program was designed to work with the BASIC Stamp 2 or better, each PULSIN command is consecutive to prevent any data bits from being lost due to processing time.

#### **Entering Multiple Numbers**

You can use Program Listing 1.5 to display sequences of numbers entered into the universal remote. This program is only using the first seven bits instead of all eleven bits the remote sends. This saves memory, and you can still use most of the commonly used keys on the remote. The program waits for you to press the "Enter" key on the remote before displaying the value. You can use the previous example program (Program Listing 1.4) to figure out what the code is for each key and expand this program's functionality.

'				
' Program Listing	g 1.5 - Enter	ing Multiple	Numbers with	IR.bs2
declarations:				
IR_det_pin IR_detect	con var	8 in8		
pause_time active_low active_high debounce_time	con con con	20 0 1 200		
enter	con	11		

PÆALIAX ⅔ - Page 1.13

```
power
               con
                          21
                          word(7)
         var
IR_pulse
counter
               var
                          nib
                          nib
type
               var
entered_value var
                          word
pulse_delay_time con
                         2
IR_message var
                         byte
*_____
initialize:
                                         ' Boot Routine
 IR_message = 0
 entered_value = 0
 debug cls
 debug "Enter a number between 0 and 65535.", cr
 debug "Press the enter key on your remote", cr
 debug "to see the number you entered.", cr, cr
 debug "Press Power (TV on/off) to start over", cr, cr
·_____
main:
                                         ' Main Routine
  if IR_detect = 1 then main:
  get_IR_data:
    gosub process_IR_pulses
    if IR_message = power then initialize
    if IR_message > enter then user_pressed_wrong_key
    if IR_message = enter then user_pressed_enter
    ' Correct for the fact that the 1-key is 0, the 2-key
    ' is 1,..., the 0 key is 9.
    lookup IR_message, [1,2,3,4,5,6,7,8,9,0], IR_message
    entered_value = entered_value * 10 + IR_message
    pause debounce_time
    debug "You pressed ", dec1 IR_message, cr
    goto main
  user_pressed_wrong_key:
    debug "Press one of the numeric keys", cr
    debug "or press enter. ", cr
    goto main
  user_pressed_enter:
```

PÆALIAX ∄ - Page 1.14

```
debug "The number entered was: ", dec5 entered_value, cr, cr
    entered_value = 0
goto main
·-----
                                               _____
process_IR_pulses:
                                             ' Subroutine
  check_for_stop_bit:
   pulsin IR_det_pin,active_high,IR_pulse(0)
   if IR_pulse(0) > 1400 and IR_pulse(0) <> 0 then continue
   goto check_for_stop_bit
   continue:
     pulsin IR_det_pin,active_low,IR_pulse(0)
     pulsin IR_det_pin,active_low,IR_pulse(1)
     pulsin IR_det_pin,active_low,IR_pulse(2)
     pulsin IR_det_pin,active_low,IR_pulse(3)
     pulsin IR_det_pin,active_low,IR_pulse(4)
     pulsin IR_det_pin,active_low,IR_pulse(5)
     pulsin IR_det_pin,active_low,IR_pulse(6)
     for counter = 0 to 6
lookdown IR_pulse(counter), < [400,800], IR_message.lowbit(counter)</pre>
     next
return
```


### Stamp to Stamp Communication

For kicks, let's create our own Stamp-2-Stamp protocol. Here are some specifications I just made up:

- A start bit is 1 ms
- A binary-0 is 2 ms
- A binary-1 is 3 ms
- A stop bit is 4 ms
- The delay between pulses is 2 ms + any loop processing overhead
- 8 data bits are transmitted

Some humor: Send your RFCs (Recommendations for Change) for this emerging protocol to <u>alindsay@parallaxinc.com</u>.

This activity is designed for use with two BASIC Stamp 2 modules. Connect your IR LED and IR detector circuits to separate BASIC Stamp 2 modules as shown in Figure 1.7. Download Program Listing 1.6 into the transmitting BS2, and disconnected it from the programming cable. Next, connect the receiving BS2 to the programming cable and download Program Listing 1.7 into it. Leave it connected to the programming cable for debugging. Press and release the reset button on the transmitting BS2 while pointing its IR LED at the receiving BS2's IR detector. The receiving BS2 will display the number the transmitting BS2 sent (25 in this case).

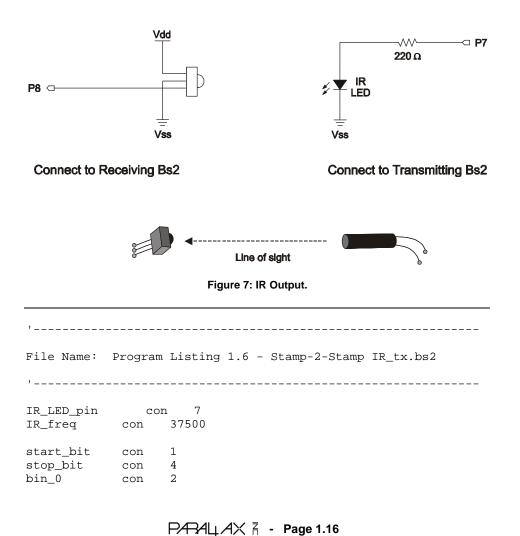

```
bin_1
       con 3
between_pulses con
                       2
counter var nib
IR_message var
duration var nib
                       byte
                      nib
IR_message = 25
freqout IR_LED_pin,start_bit,IR_freq
pause between_pulses
for counter = 0 to 7
  duration = 2 + IR_message.lowbit(counter)
  freqout IR_LED_pin,duration,IR_freq
  pause between_pulses
next
freqout IR_LED_pin,stop_bit,IR_freq
' ****** Reset Stamp to run again ******
stop
```

```
'-----
File Name: Program Listing 7 - Stamp-2-Stamp IR_rx.bs2
'------
IR_detect_pincon 8
IR_signal var in8
start_bit con 500
```

PARALLAX ⅔ - Page 1.17

```
bin_0
             con
                     1100
bin_1
             con
                     1600
stop_bit
             con
                     1900
active_low
                        0
                 con
counter
                        nib
             var
IR_pulse
             var
                        word
duration
             var
                        nib
IR_message
                var
                        byte
loop:
  if IR_signal = 1 then loop
  process_message:
    pulsin IR_detect_pin,active_low,IR_pulse
    if IR_pulse > stop_bit then display_message
    lookdown IR_pulse, < [bin_0,bin_1],</pre>
IR_message.lowbit(counter)
    counter = counter + 1
    goto process_message
  display_message:
    debug "Message received,", cr
    debug "it's ", dec3 IR_message, cr
    IR_message = 0
    counter = 0
goto loop
```

### **Extending the IR Range and Capabilities**

You can use a transistor and a 100  $\Omega$  to better than double the transmitting power of the IR LED in your kit. A 555 timer can also be used to enable BASIC Stamp to use the SERIN and SEROUT commands for IR data exchange. The circuit is featured in BASIC Stamp 1 Application Note 11 – Infrared Communication. The BASIC Stamp 1 application notes are available for free download from the <u>www.parallaxinc.com</u>  $\rightarrow$  Downloads page.

PARALLAX ₹ - Page 1.18