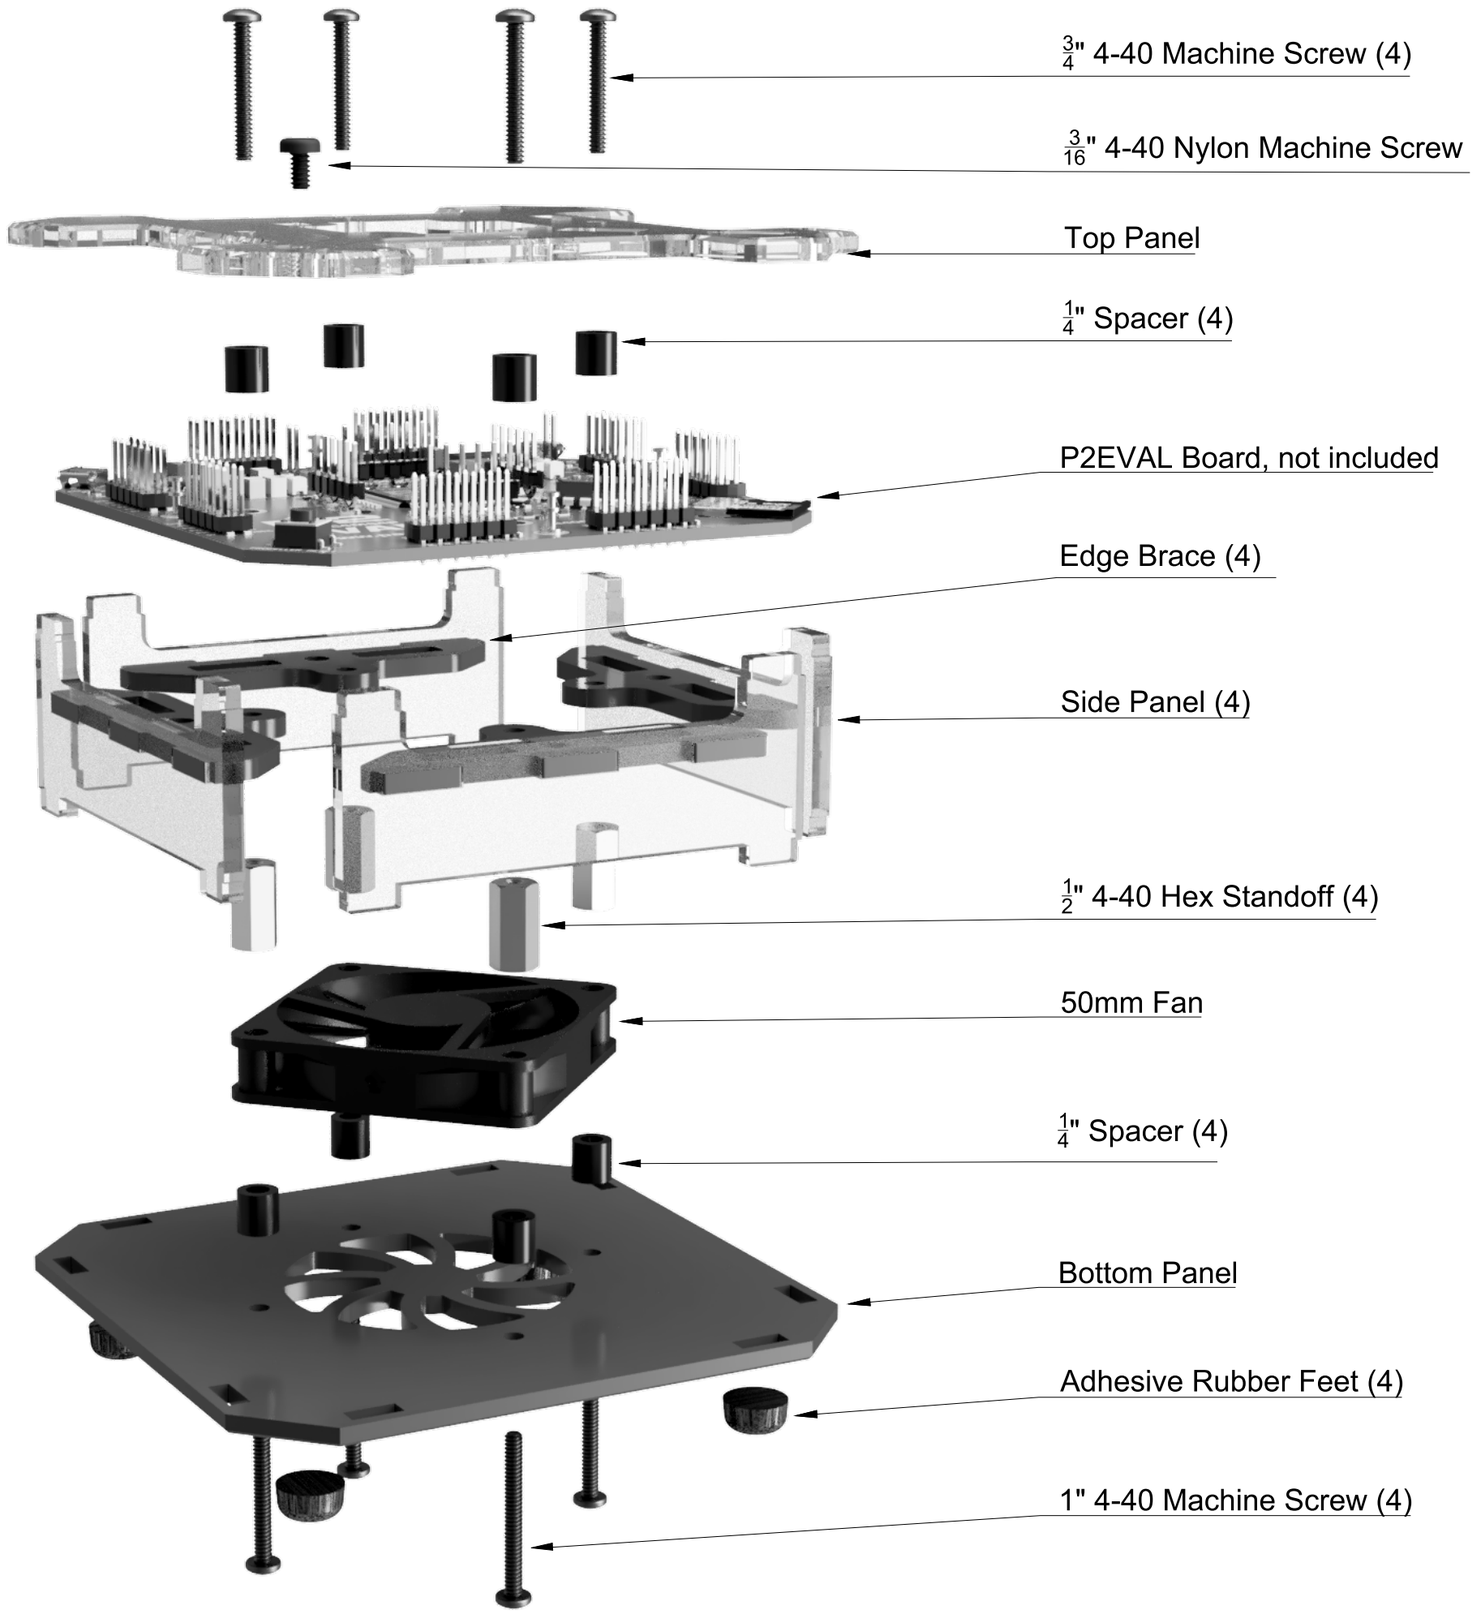

Assembly Instructions

1. Remove protective paper backing from all acrylic parts, warming them with a hair dryer will make paper removal easier.
2. Attach the four rubber feet onto the bottom acrylic panel.
3. Assemble the $\frac{1}{2}$" hex standoffs, Fan and $\frac{1}{4}$ spacers to the bottom panel using the 1" long 4-40 screws.
4. Join the four edge braces to the side panels by pressing into place, make sure they are fully seated.
5. Join the four side panels to the bottom panel,make sure they are fully seated.
6. Place the P2 Eval Board on top of the edge braces.
7. Attach the top acrylic panel.
8. insert each $\frac{1}{4}$" spacer between the top panel and the P2EVAL Board and fasten with a $\frac{3}{4}$" machine screw.
9. Thread in the $\frac{3}{16}$" nylon screw into the top panel and adjust so that it nearly touches the reset button.